

INNER RANGE CONCEPT 2000

Arming & Disarming

1. **How To Disarm**

- Enter a user code and press [OK]. The LCD terminal will display a welcome message.
- Select the area to disarm (1 to 8 or using the up / down keys) and press [OFF].
- The terminal will display [Area x is OFF]
- Disarm more areas as necessary.
- Press [END] when finished.

2. **How To Arm**

- Close all protected doors and windows, and stop movement in the areas covered by motion detectors.
- Enter a user code and press [OK]. The LCD terminal will display a welcome message.
- Select the area to arm (1 to 8 or using the up / down keys) and press [ON].
- If any zones within that area are open (un-sealed) the display will show which zones to check.
- Once armed the terminal will show [Area x is in exit delay].
- Press [END] and leave the protected areas.

3. **What To Do If Code Does Not Work**

- Press the [END] key and re-enter your user code.

4. **How To Night Arm**

- Arm the areas that relate to perimeter zones.

5. **How To Fully Arm**

- Arm the required areas.

Keypad Functions

6. **How To View Memory**

- Enter [User Code] [OK] [MENU] [1]
- The most recent event will be displayed on the terminal. The top line will show the time, and the second line will show the actual event.
- Press the up key to go backwards through memory.
- Press the down key to move forwards through memory.
- Press [1] to search for the last alarm / restore that occurred.
- Press [OK] to toggle between standard and condensed mode.

7. **How To Exit Memory**

- When finished press the [MENU] key to enter another menu option, or
- Press the [END] key to finish using the system.

8. **How To Bypass (Isolate) Zones**

- Enter [User Code] [OK] [MENU] [3]
- The display will show [Zone to Isolate or Enable? 01].
- Select a zone to isolate by entering the zone number or using the left / right keys. Press [OK].
- The current status of the zone will be displayed. (Isolated / Enabled)
- Press the [OFF] key to isolate, or press the [ON] key to enable the zone. Press [OK]
- When finished press the [MENU] key to enter another menu option, or
- Press the [END] key to finish using the system.

9. **How To Clear Bypasses**

- Enter [User Code] [OK] [MENU] [3]
- The display will show [Zone to Isolate or Enable? 01].
- Select a zone to enable by entering the zone number or using the left / right keys. Press [OK].
- The current status of the zone will be displayed. (Isolated / Enabled)
- Press the [OFF] key to isolate, or press the [ON] key to enable the zone. Press [OK]
- When finished press the [MENU] key to enter another menu option, or
- Press the [END] key to finish using the system.

10. **How To View Trouble**

- When a trouble condition occurs an error message will be displayed.
- Some examples are [Power has failed to a control unit], [Battery is low in Remote unit], and [-Warning- Lost module]
- Most events are also logged in memory and can be viewed from menu option 3.

11. **How To Clear Trouble**

- In most cases a technician will need to attend the site or upload / download to the panel to fix any problems.

User Codes

12. How To Add User Codes

- Enter the master code followed by [OK]
- Press [MENU] [2]. The display will prompt for a user number.
- Enter a user number for the new code. Press [OK]
- Enter the name of the user. Press [OK]
- Enter the user code for the user. Press [OK]
- Select the areas the user has access to, by moving the cursor under the correct area number, and selecting that area by pressing [9]. To de-select an area press any other number. A 'Y' will appear under the selected areas. Press [OK]
- Set the options for the user code by pressing either [9] for yes or any other number for no. Press [OK] and move on to the next option. The options are:
 - Menu Isolation?
 - Review Events?
 - Turn Off Areas?
 - Deadman Timer Enable?
 - Alter User Codes?
 - Use Area 0 and 9?
 - Isolate On Exit?
 - Walk-test Areas?
- Set the time zones that this code will work in, by putting a 'Y' under the corresponding time zone number (1 to 5). Press [OK].
- Set the remaining options:
 - Assume One Area?
 - Lock Only Code?
 - Spare... (Set to 'N')
 - Duress Code?
- Finally choose the scroll rate for the user, by entering a number between 1 and 8. Press [OK]
- Set up any other users by entering their user code number, or press [END] to finish.

13. How To Delete User Codes

- Enter the master code followed by [OK]
- Press [MENU] [2]. The display will prompt for a user number.
- Enter a user number for the code to delete. Press [OK]
- When the name of the user appears, press [OFF] [OK] to clear the users name.
- When the user code appears, press [OFF] [OK], to clear the users code.
- Clear the rest of the option if you wish by pressing [OFF] [OK] for each.
- Press [END] to finish. The display will go back to the prompt, and the backlight will turn off.

14. How To Overwrite User Codes

- Follow the instructions for adding a user code but substitute the new user number for the user number to change.
- Enter new data over the top of the old data.